

AAW Z05 AuAg

AuAg Launch Edition Product Literature Draft

Universal 5-driver hybrid in-ear monitor with TwinCore Crossover Switch System



Edited launch hero from IMG_5345.JPG: forged carbon faceplates with gold right and silver left foil lacing.

Positioning

Z05 AuAg is the AuAg Launch Edition of AAW's Z05 universal in-ear monitor platform. It is derived from the Z06 design philosophy, then reshaped around a new PET diaphragm 10mm dynamic woofer, switchable full-spectrum crossover tuning, and a forged-carbon shell finished with gold foil on the right side and silver foil on the left.

Field	Detail
Product name	AAW Z05 AuAg Universal In-Ear Monitor
Edition naming	AuAg Launch Edition

Field	Detail
Architecture	5-driver hybrid: 1 x 10mm PET dynamic woofer, 2 x mid BA drivers, 2 x super-high BA drivers
Crossover	3-way passive crossover with TwinCore Crossover Switch System
Acoustic system	Bass-Flow Vent Pressure System
Cable	2-pin detachable cable with swappable 3.5mm stereo, 4.4mm balanced, and Type-C terminations
Fit system	LiquidMorph eartips
Specifications	Sen.: 110dB @ 1kHz; Imp.: 12Ohm @ 1kHz; THD: <0.5% @ 1kHz

Hero Copy

Long Form

AAW Z05 AuAg is a universal-fit hybrid in-ear monitor designed for listeners who want both acoustic authority and personal control. Built around a new PET diaphragm 10mm dynamic woofer, Z05 delivers a physical low-frequency foundation while preserving the spacious, high-resolution character of the Z series. Its TwinCore Crossover Switch System changes between two complete crossover states, giving listeners a direct way to reshape the monitor's presentation across the full spectrum.

The AuAg Launch Edition turns that acoustic platform into a more distinctive visual object. Forged carbon faceplates sit inside a deep black universal shell, with gold foil laced through the right earpiece and silver foil laced through the left. The finish continues through the body shell, making the gold/silver identity part of the whole monitor rather than a faceplate-only accent.

Short Form

Z05 AuAg is where power, control, and craft meet: a PET diaphragm dynamic woofer, TwinCore full-spectrum tuning, modular source connection, and a forged-carbon AuAg shell built for the Launch Edition.

Product Card



Updated product card: AuAg Launch Edition, corrected key features, and final published specifications.

TwinCore Crossover Switch System

The Z05 switch is not a conventional one-component on/off switch. It changes between two complete crossover circuit states. The blue position places 200hm loading on both low-frequency and high-frequency paths. The red position changes the low-frequency path to 400hm and shorts the high-frequency path to 00hm. Because both paths are affected, the response changes across the whole spectrum rather than only boosting or cutting one band.

Field	Detail
Market name	TwinCore Crossover Switch System

Field	Detail
English slogan	Two complete crossovers. Two Z05 AuAg characters.
Chinese slogan	??????????????
Blue position	Low-frequency path: 200hm; high-frequency path: 200hm
Red position	Low-frequency path: 400hm; high-frequency path: 00hm
Customer benefit	A broader voicing shift that changes bass weight, vocal balance, and upper-frequency presence together.

AuAg Exterior Story

The Z05 AuAg exterior is designed to feel more jewelry-like than a standard universal monitor while staying technical and dark. Each side uses a forged carbon faceplate with matching foil lacing through the corresponding shell body: gold for the right ear and silver for the left. Under the glossy black shell, the foil creates layered depth and a mineral-like shimmer.




Gold right and silver left faceplate view.



Switch close-up showing blue/red position marking.

Accessories And Fit

Z05 AuAg has the same general accessory direction as Z06, with one important update: the cable is a new entry-level detachable cable with a practical multi-connector system. The cable itself does not need a branded name; the selling point is simple source flexibility across 3.5mm stereo, 4.4mm balanced, and Type-C.

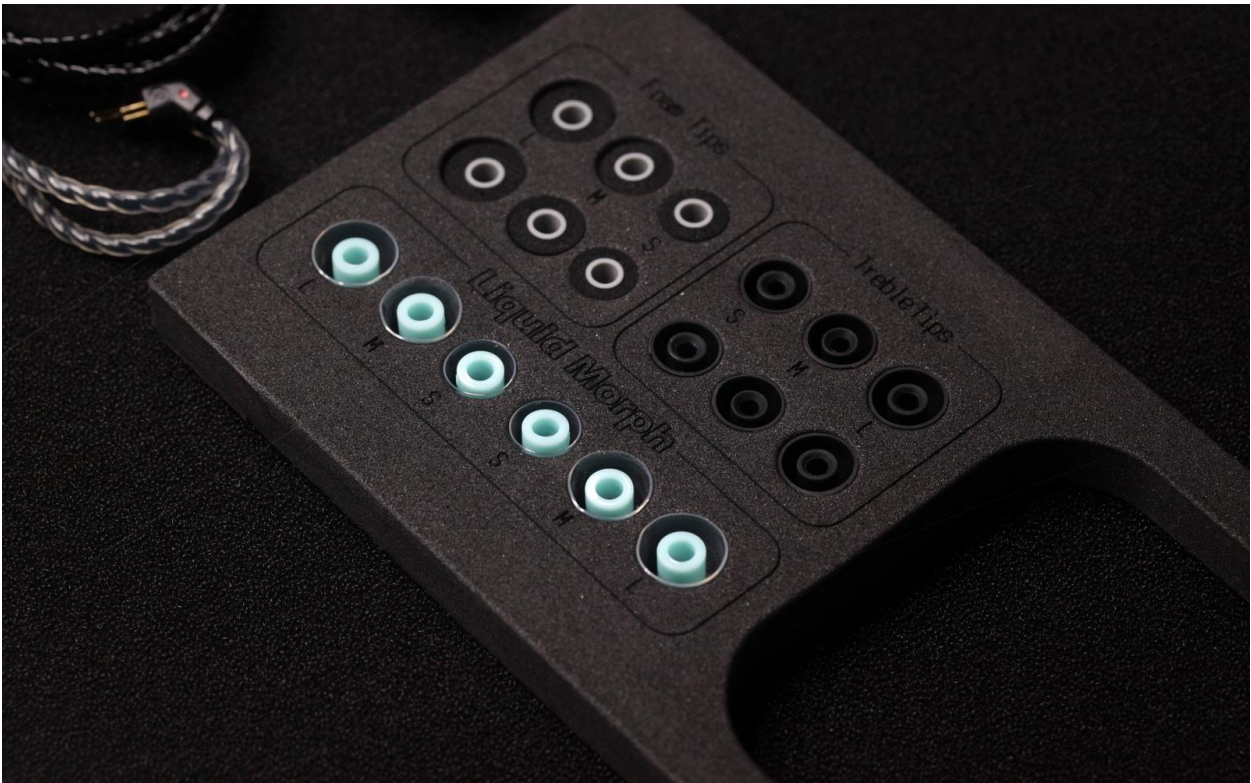

Accessory-section image: LiquidMorph tray context with Z05 AuAg package components.

Field	Detail
Included monitors	Z05 AuAg universal in-ear monitor pair
Included cable	2-pin detachable cable with swappable source-side connector system
Termination options	3.5mm stereo, 4.4mm balanced, Type-C
Fit accessories	LiquidMorph eartips
Other accessories	Carrying case and standard support accessories aligned with the Z-series package direction

LiquidMorph Eartips

The LiquidMorph section should use the standalone eartip image rather than the tray image, because the eartip-only visual clearly shows the transparent flange shape and teal inner bore. This makes the fit-system explanation clearer than a tray-context photo.



LiquidMorph section image: eartip-only visual for clear shape recognition.

Selected Launch Image Set


Eight edited images were selected from the supplied dump for the product page and literature. The set balances hero appeal, finish detail, switch access, cable practicality, accessory context, and eartip explanation.




IMG_5345.JPG - Hero faceplate view



IMG_5355.JPG - Gold/silver forged-carbon faceplates

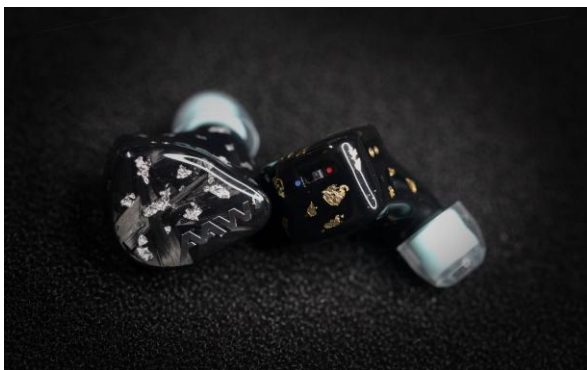


IMG_5324.JPG - Switch close-up with clear blue/red position

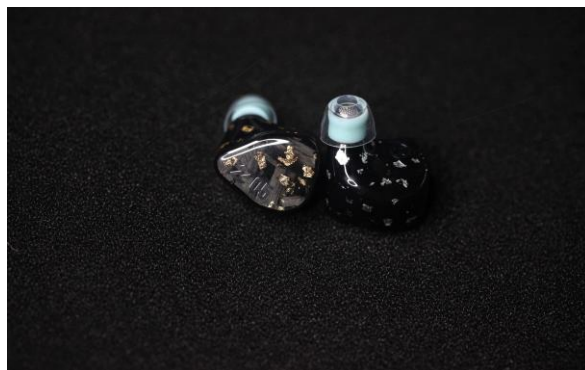


IMG_5328.JPG - AuAg shell angle



IMG_5311.JPG - Swappable termination cable system

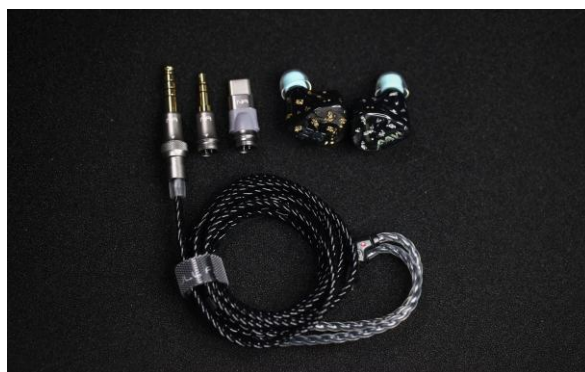

IMG_5310.JPG - Full package flatlay

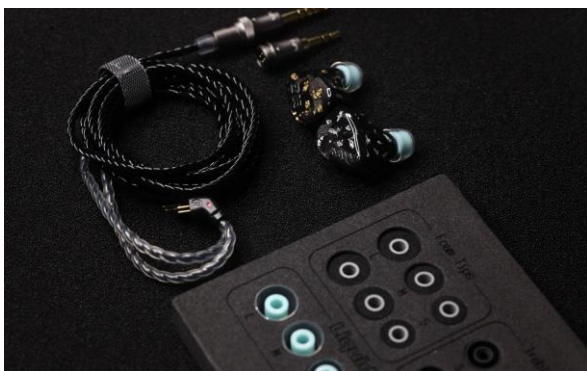

IMG_5334.JPG - Accessories and fit system



IMG_5336.JPG - Accessory tray context

Product Page Notes

- Use AuAg Launch Edition in customer-facing copy instead of launch variant.
- Use the selected hero image as the first editorial signal on the product page.

- Use the LiquidMorph tray image in the accessories section only.
- Keep the standalone LiquidMorph eartip image in the LiquidMorph section for clearer shape communication.
- Keep product configuration and checkout in the Shopify product module, while editorial sections explain the launch finish and acoustic design.